

Quick Start Guide

For more information about how to use the phone, please go to www.alcatelonetouch.com to download complete user manual (English version only). Moreover, from the website you can also consult FAQ (English version only).



www.sar-tick.com

 
This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 24 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Your mobile.....

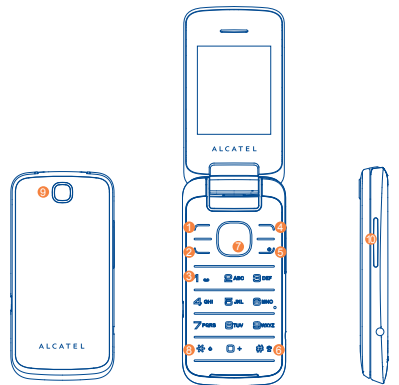

- 1 Left softkey
- 2 Pick up/Send call
- 3 Call log
- 4 Voicemail (press and hold)
- 5 Right softkey
- 6 Switch on/Switch off End call
- 7 Vibrate alert (press and hold)

- 8 Navigation key: Menu/Confirm an option if widget bar is hide: Create message ▲ Contacts ▼ FM radio ◀ Calendar ▶
- 9 * key
- 10 Camera
- 11 Volume key

1.1 Keys

- Navigation key
- Confirm an option (press the middle of the key)
- Activate music player (press and hold the middle of key)
- Scroll widget bar (press the right or left of the key)

- Pick up
- Send a call
- In idle screen:
- Access call log (Redial) (press)
- Activate fake call (press and hold)

- Switch on/Switch off the telephone (press and hold)
- End call
- Return to idle screen

- Left softkey
- Right softkey

- Access your voicemail (press and hold)

- From Idle screen:
- Press: input "0"
- Press and hold: input the symbol "+P/W"
- In Edit mode:
- Press: access the symbols table
- Press and hold: input "0"

- From Idle screen:
- Press: input ^{180°}
- In Edit mode:
- Press: change input methods
- Press and hold: access the language list



- From idle screen:
- Press: #
- Press and hold: activate/deactivate the vibrate mode
- In Edit mode:
- Press: insert a space
- Volume key (side key)
- Adjust general volume

1.2 Main screen icons ⁽¹⁾

In 2010X:

- Battery charge level
- Vibrate alert: your phone vibrates, but does not ring or beep.
- Bluetooth status (Activated).
- Bluetooth status (Connected to an audio device).
- Headset connected.
- Call forwarding activated: your calls are forwarded.
- Alarm or appointments programmed.
- Level of network reception.

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.



SD card scanning completed.



Line switching ⁽¹⁾: indicates the selected line.



EDGE attached.



EDGE connecting.



Music activated.



(Flickering) Message list is full: your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.



Voicemail message arrived.



Missed calls.



Radio is on.



WAP alerts ⁽¹⁾.



Roaming.



GPRS connection status (Activated).



GPRS connecting.



Sending a MMS.



MMS receiving.

⁽¹⁾ Depending on your network operator.

 
2 Getting started.....

2.1 Set-up


Removing and installing the back cover



Removing and installing the battery




Inserting and removing the SIM card

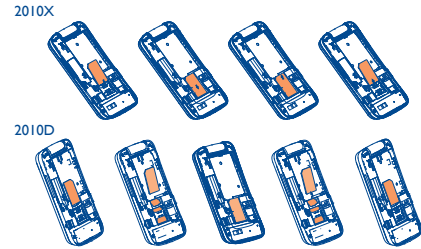 

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

 Charging the battery

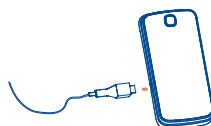

Connect the battery charger to your phone and mains socket respectively.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Bluetooth when not in use; reduce the backlight time, etc.



The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key from the main screen.

3 Making a call.....

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.1 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

3.2 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.3 Available functions during the call

During a call, you can use your directory, your calendar, short messages, etc. without losing your correspondent.

⁽¹⁾ Contact your network operator to check service availability.

4 Contacts.....

4.1 Consulting your contacts

To access the **contacts** from the main screen, press the key and select the icon from the menu.

For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu ⁽¹⁾.

4.2 Adding a contact

You can add a new contact to phone or SIM card by selecting "Add contact".

5 Messages.....

5.1 Create message

From the main menu select "Messages" to create text/multimedia message. You can type a message and you can also modify a predefined message in **Templates** or customise your message by adding pictures, sounds, videos, etc (only available while editing a MMS). While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts** or **Templates** (MMS only).



Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

⁽¹⁾ 2010D only.
English - CJB26V00ALAAA

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

